



OPERATING & MAINTENANCE INSTRUCTIONS
FOR

Manual Slide Valve

BULK HANDLING SPECIALISTS www.ROTOLOK.com





MANUAL PUSH/PULL SLIDE VALVE OPERATING & **MAINTENANCE INSTRUCTIONS**

Construction

The manual Slide Valve is constructed of 100 x 45 x 3mm folded stainless steel plate forming the main frame of the valve. The slide plate is cut from 5mm stainless steel.

The slide plate runs on oilite bushed standard duty stainless steel or stainless steel rollers, nylon rollers are also available. The rollers are mounted on either mild steel or stainless steel pins dependent on the roller material. To prevent dust seepage and to protect the rollers, an angled stainless steel deflector is welded to the frame and is machined for close contact with the slide plate.

A packed gland is fitted around the slide plate at the entry point of the slide plate into the valve casing. The packing is generally of white felt or maybe of other materials to suit product and product temperatures, etc. This gland is intended to minimise dust or air leakage from the valve but may not give a complete seal.

Operation

The slide is operated by means of a handle attached to the rear of the slide plate. The operator simply pulls the handle to open the valve and pushes it to close the valve. The slide plate is fitted with a stop bar to prevent it being pulled clear of the valve.

Maintenance

The valve is basically maintenance free but attention may be needed at times to ensure the rollers rotate freely. Adjustment of the gland follower may be required to reduce dust leakage at the slide plate gland.


Should the packing need replacing, first remove the valve from the system if at all possible. Undo the fixings securing the gland follower and slide it back along the slide plate. You can now replace the old packing with similar material and re-secure the gland follower. It is suggested that after a few days the gland is checked and tightened if found to be necessary due to the packing compacting.







ROTOLOK Worldwide

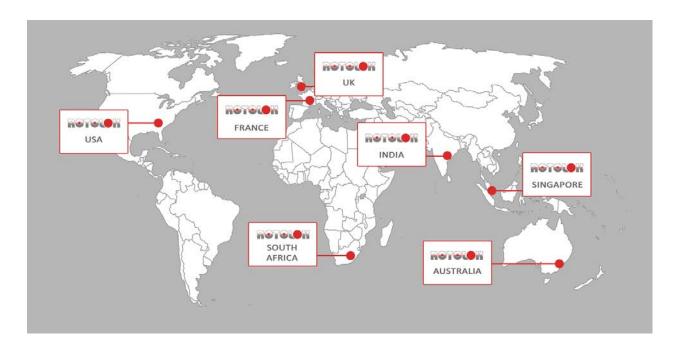

ROTOLOK UK

1 Millennium Place Tiverton Business Park Tiverton Devon EX16 6SB United Kingdom

Tel: +44 (0) 1884 232232 Fax: +44 (0) 1884 232200

www.rotolok.co.uk sales@rotolok.co.uk

ROTOLOK SOUTH AFRICA

3 The Triangle Maraisburg 1709 Republic of South Africa

Tel: +27 (0) 11 674 1166/7 Fax: +27 (0) 11 674 4372

www.rotolok.co.za sales@rotolok.co.za

ROTOLOK USA

Industrial Ventures II 2711 Gray Fox Road Monroe North Carolina 28110 United States of America

Tel: +1 (704) 282 4444 Fax: +1 (704) 282 4242

www.rotolok.us sales@rotolok.us

ROTOLOK AUSTRALIA

Unit 1 6 Bonz Place Seven Hills Sydney NSW2147 Australia

Tel: +61 2 9620 4735 Fax: +61 2 9620 4751

www.rotolok.com.au sales@rotolok.com.au

ROTOLOK SINGAPORE

7 Mandai Link #10 - 11 Mandai Connection Singapore 728653

Tel: +65 6744 6415 Fax: +65 6744 6425

www.rotolok.sg sales@rotolok.sg

ROTOLOK INDIA

1375 Jeedi Drive, Sector 28 Sri City, Sathyavedu mandal Chittoor District, AP - 517588 India

Tel: +91 (0) 8099 454384

www.rotolok.in sales@rotolok.in

ROTOLOK FRANCE

Z 1 Les Jalassieries CD18 13510 Eguilles France

Tel: +33 (0) 4 42 95 44 00 Fax: +33 (0) 4 4220 76 27

www.rotolok.fr sales@rotolok.fr



